


**NOTE: THIS IS NOT A SUGGESTION,
THE CLEAR PROCEDURE BELOW MUST BE
DONE THE FIRST TIME THE BOARD IS
PLUGGED IN.**

S6000 EASY CLEAR CHIPS, HOW TO USE THEM TO CLEAR YOUR BOARD

Step 1. locate DSW1 along the left edge of your board.



Step 2. Turn on only switch #8.

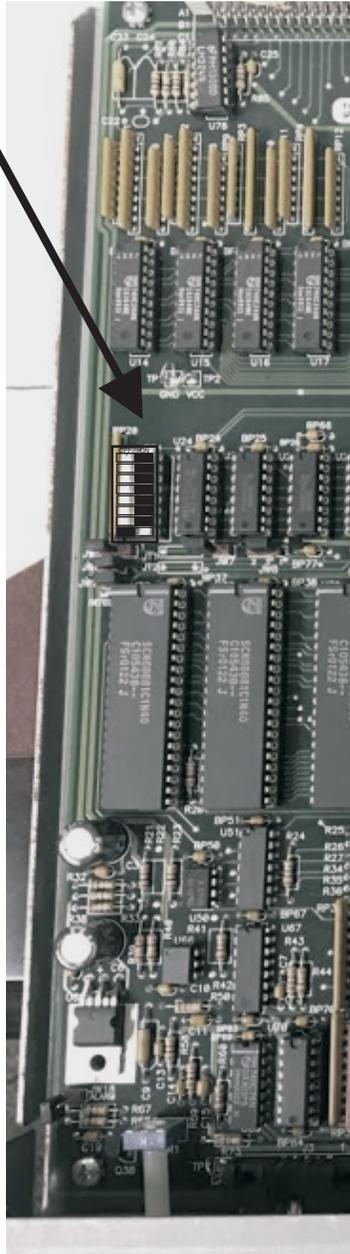

CLEARING THE BOARD

Step 3. Plug your board back into the game.

Step 4. While holding in the TEST and PSEUDO COIN buttons on the front of your tray AND while watching the front door display turn on power and look for a CHC then a CLC.

Step 5. If you get a CHP and CLP tap the reset button and immediately hold in the TEST and PSEUDO buttons to try again.

Step 6. Turn off power to the game and pull out the board and turn DSW1 DIP switch #8 off.

Step 7. Install your board and turn power back on.

Step 8. DO NOT CLOSE THE DOOR. Wait for the reels to do their bump seek, when they are done you will see some numbers on the display, some flashing. Tap your change button once to get to a 50 code on the display. Close the door and you are ready to play.

complements of
K-LAR Electronic Slot Repair
klar.slotrepair@gmail.com
702-363-9998